


SIP-T53/T53W/T53C

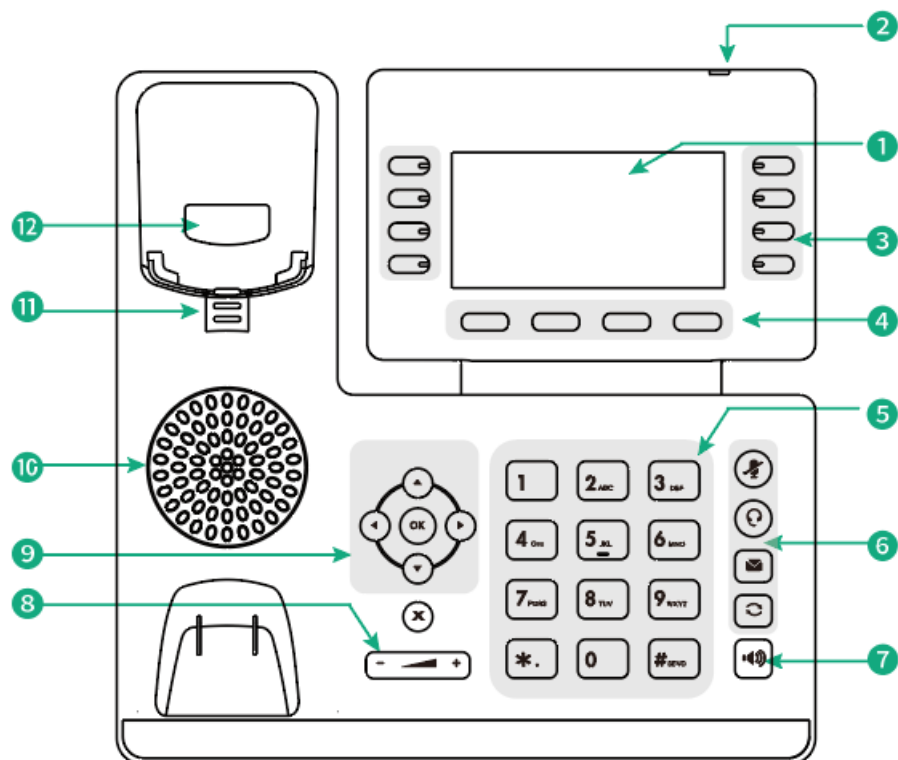

NO.	Item	Description
1	Phone Screen	Show a screen with a backlight that enables you to view menus and data.
2	Power LED Indicator	Indicate call, message, and phone system status.
3	Line Keys	Access your phone lines and features.
4	Soft Keys	Access the function on the screen above the soft keys. The soft keys change depending on what you are doing at the time.
5	Keypad Keys	Allow you to enter numbers, letters, and special characters. If a menu item has an index number, you can use the keypad keys to select the item.
6	HEADSET Key	Toggle and indicates the headset mode. The key LED glows green when the headset mode is activated.
6	MUTE Key	Toggle the microphone on or off.
6	REDIAL Key	Redial a previously dialed number.
6	TRANSFER Key	Transfers a call to another party.

6	MESSAGE Key	Access your voice messages.
6	HOLD Key	Place a call on hold or resume a held call.
7	Speakerphone Key	Toggle and indicates the hands-free (speakerphone) mode. The key LED glows green when the hands-free (speakerphone) mode is activated.
8	Volume Key	Adjust the volume of the handset, headset, and speaker.
9	Navigation Keys	· Scroll through information or options displayed on the screen. · Access History and Directory respectively.
9	OK Key	Confirm action or answer incoming calls.
9	Cancel Key	Cancel action or reject incoming calls.
10	Speaker	Provide ringer and speakerphone audio output.
11	Reversible Tab	Secure the handset in the handset cradle when the phone is mounted vertically. For more information on how to adjust the reversible tab, refer to Yealink Wall Mount Quick Installation Guide for Yealink IP Phones .
12	Hookswitch	Connects or disconnects the phone from the phone line. The hookswitch is automatically activated when a user lifts the handset from the cradle to get a dial tone.